

WIRELESS 1000 Annunciator System



RC-10U CHIME BOX W/RELAY

This product is only compatible with Wireless 1000 series.

RC-10U MANUAL

Please read this manual carefully before installation.

FEATURES

- Compatible with TD-10U (In/Outdoor Sensor Transmitter) & TS-10U (Hand-Held Transmitter)
- Identifies zones (locations) by 3 different tones and LED lights
- Preset transmission codes are automatically "learned" by the receiver
- Over 8 million codes possible, eliminates interference from neighbors
- Latches into alarm with "Continuous Mode" option
- Programmable output mode for activation without chime tone
- Adjustable duration for dry relay contact output
- Push button switches to select function settings
- Volume control, low battery indicator
- Powered by a 9VAC adaptor (included)

CAUTION

Please be careful of the following:

1. Outdoor Use

The RC-10U is not suitable for outdoor use.

2. High Temperature, High humidity & Dirty Fumes

Do not expose the RC-10U to high temperatures, steam, high humidity, dirty fumes or oily smoke.

3. Other Electric Devices

Use the RC-10U at least 3ft (1m) away from devices such as TV, radio, personal computer, microwave oven, refrigerator or any device with electric motors (this may cause malfunction).

4. Transmission range may decrease under following conditions.

- A steel door, steel reinforced concrete, or other metal obstructions between the transmitter and the RC-10U.
- Installing either the transmitter or the RC-10U on a metal surface.
- Places near a strong radio sources such as a broadcast stations or high power lines.

5. Impact/Shock

Do not drop the RC-10U or give it a strong impact/shock.


6. Tampering

The changes or modifications not expressly approved by the party responsible for compliment could void the user's authority to operate the equipment.

7. Cleaning


Harsh cleaners such as paint remover or benzene may ruin the surface. Use a soft, wet cloth and mild soap or detergent to clean.

PART IDENTIFICATION

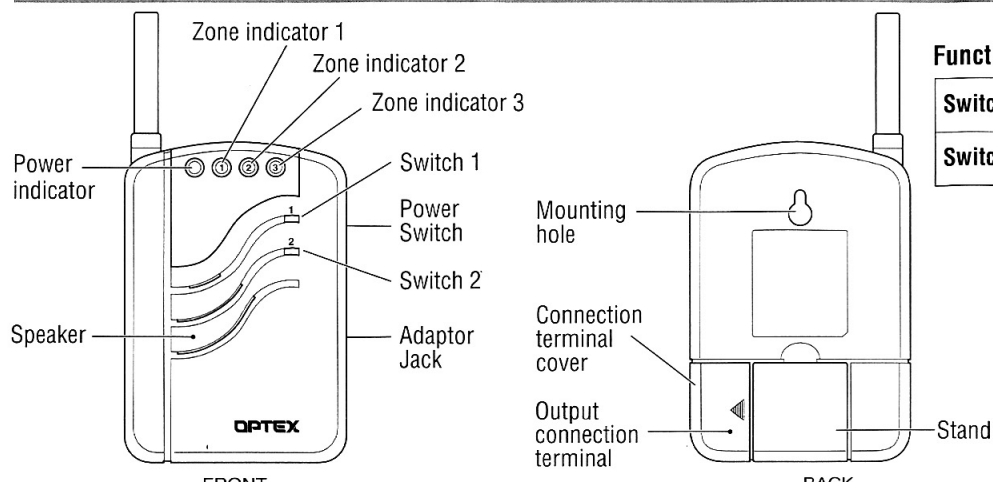

Function

| | |
|-----------------|--|
| Switch 1 | Activating "Learn Mode" and "Output Duration Mode" |
| Switch 2 | Activating "Volume Adjustment Mode" and making selection |

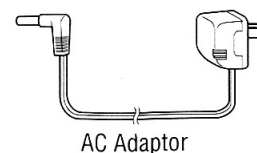


MAXIMUM TRANSMISSION RANGE


1000ft. (with TD-10U, open field, line of sight)
700ft. (with TS-10U, open field, line of sight)

Measurements were made over level ground without obstruction. Natural or man-made obstacles and other environmental factors can interfere with or otherwise reduce transmission range. Always confirm actual transmission range during installation of system. Please use the information below as a reference for transmission performance.

| | TD-10U | TS-10U |
|-----------------------------------|--------|--------|
| Stucco/Plaster construction: | 150ft | 110ft |
| Reinforced concrete construction: | 100ft | 70ft |

 

FRONT

 


BACK




Mounting screw

| Structure / Construction | 100ft | 110ft |
|-----------------------------------|-------|-------|
| Reinforced concrete construction: | 100ft | 70ft |

INSTALLATION

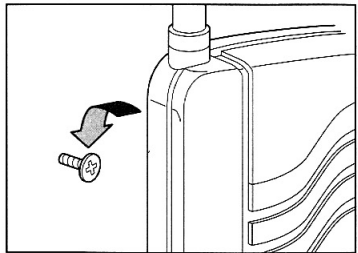


Mounting On A Wall
Use the mounting screw on a wall. Leave some length of the screw out for the mounting hole of the RC-10U.

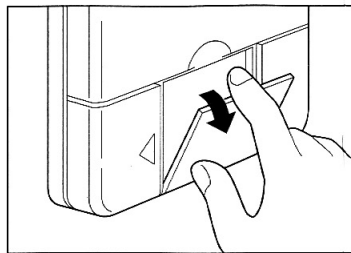

Desk Top
Pull out the stand on the back of the RC-10U and place it on any flat surface.

POWER CONNECTION

Use only the power adaptor supplied with the product.

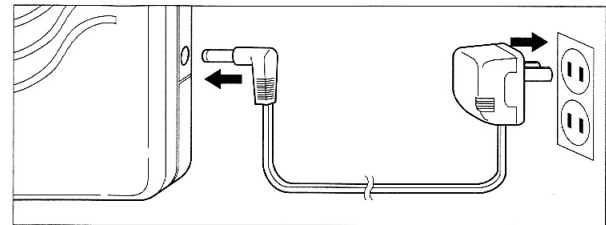

TEACH TRANSMITTER CODES TO RECEIVER

Each transmitter has a unique transmission code which can be automatically "learned" by the RC-10U. The RC-10U's zones must be taught to respond to the appropriate transmitter. Zone characteristics can be programmed as shown below.

Regular Mode



| | |
|----------------|---|
| Zone 1: | Chime tone 1 (optional timed utility output) |
| Zone 2: | Chime tone 2 (optional timed utility output) |
| Zone 3: | Chime tone 3 (optional timed utility output) |
| Zone 4: | Continuous tone and terminal output (latches until Switch 2 is pressed to deactivate) |

Utility Output Mode

| | |
|----------------|---|
| Zone 1: | Chime tone 1 only |
| Zone 2: | Chime tone 2 only |
| Zone 3: | Timed relay output only (1 sec) |
| Zone 4: | Continuous tone and terminal output (latches until Switch 2 is pressed to deactivate) |

Teach transmitter code to receiver

Activate "LEARN" Mode

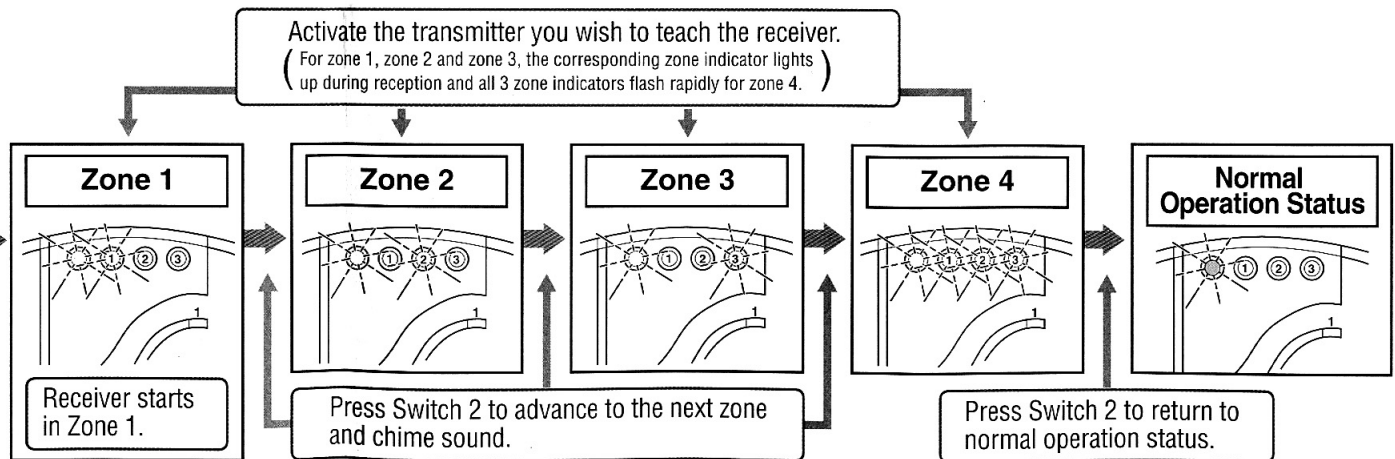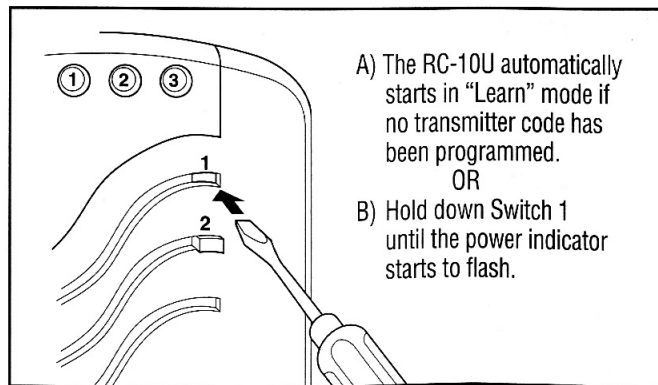

Note:


- Return to normal operation status before use.
- Verify that each transmitter has been learned by the RC-10U by triggering them.
- Each zone can learn only 1 transmitter. If 2 transmitters are activated during the learning process, the transmitter activated last will override the code of the previous transmitter.
- Single transmitter cannot be learned by multiple zones.
- Turning off the devices, or losing power will not affect transmitter or the RC-10U's code memory.

Erasing Codes from Receiver's Memory

- 1) Hold down switch 1 until the power indicator starts to flash.
 - 2) Press Switch 2 until appropriate zone indicator is lit.
 - 3) Press Switch 1 (the zone indicator will start to flash).
 - 4) Press Switch 2 few times until the power indicator stops flashing and remains lit.
- (Note: To erase all programming and return to factory setting, turn on power while holding down Switch 1.)

VOLUME ADJUSTMENT


Chime volume for zone 1~3 can only be set as a group. There are 5 volume settings. Chime volume is set to level 3 at the factory.

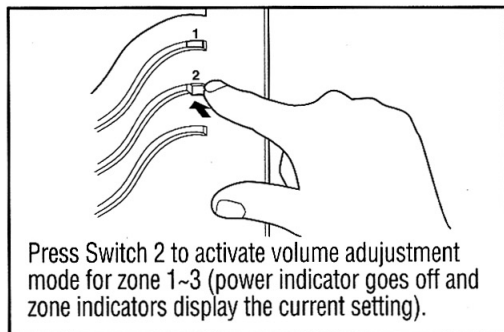

Adjust Volume


After 5 seconds, the receiver will automatically return to normal operation status (zone indicators will go off and power indicator will remain lit).

Note: Hold down Switch 2 five seconds for zone 4 (power indicator goes off and zone indicators display the current setting).

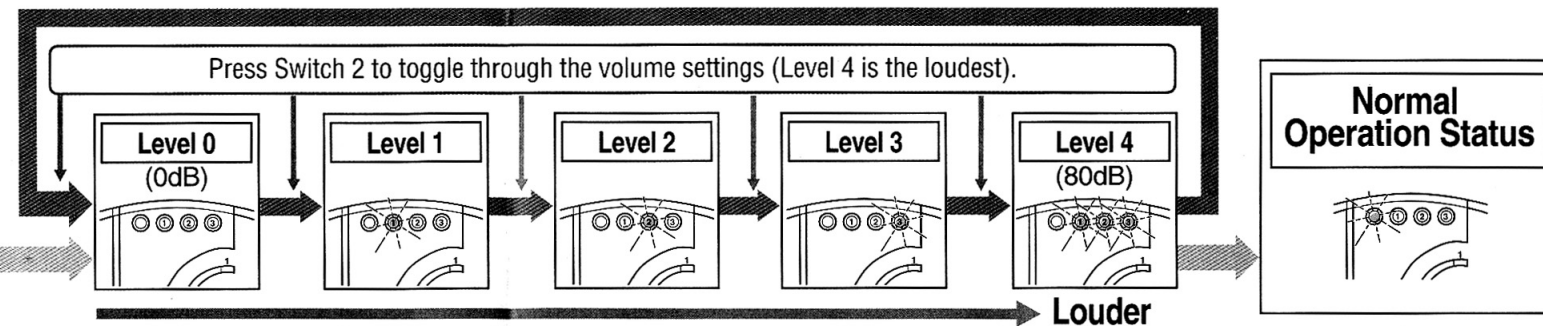


TERMINAL CONNECTION


Any device with a zero voltage input terminal can be connected to this terminal. This may include electronic locks, emergency sounding devices, and automatic reporting equipment.

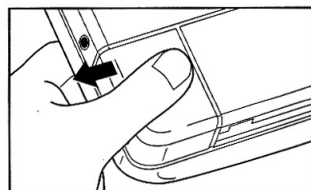


Remove the connection terminal cover

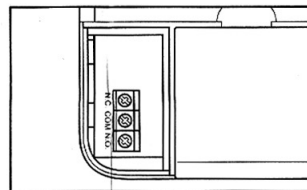

Use the terminal marked "COM-N.O." for N.O. devices and "COM-N.C." for N.C. devices.

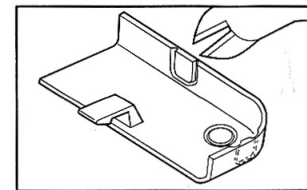

Remove knockouts according to wiring needs.

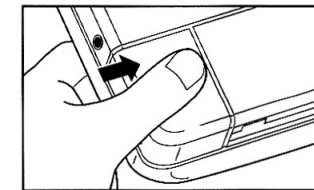



Close the connection terminal cover. The RC-10U may be damaged if the terminals come into contact with metal objects.

ADJUSTING THE TERMINAL OUTPUT DURATION

- In Regular Mode: terminal output duration can be set for zones 1~3 only as a group. Zone 4 always latches until it is reset by pressing Switch 2.
- In Utility Output Mode: terminal output (5 sec) is only for zone 3. Zone 1 and 2 will chime only and zone 4 will latch until it is reset by pressing Switch 2.
- Factory setting is 5 sec.

Adjust Terminal Output Duration

After 5 seconds, the RC-10U will automatically return to normal operation status (zone indicators will go off and power indicator will remain lit).

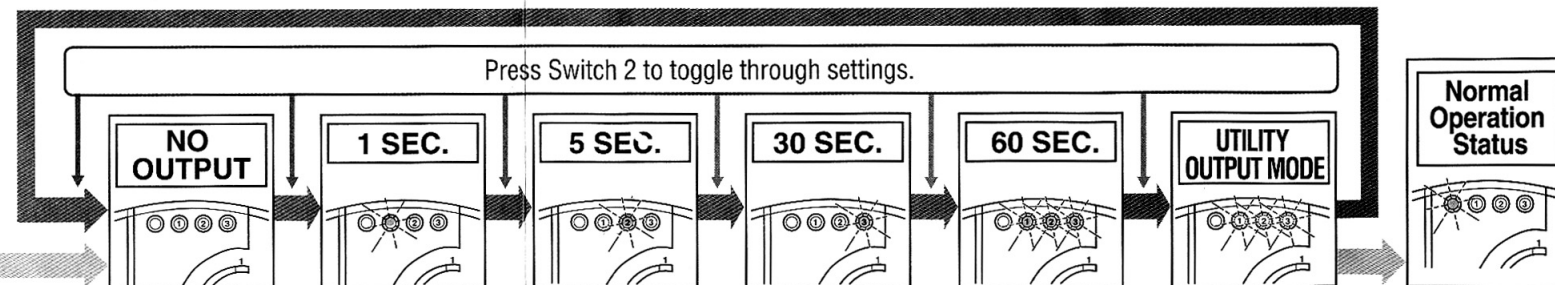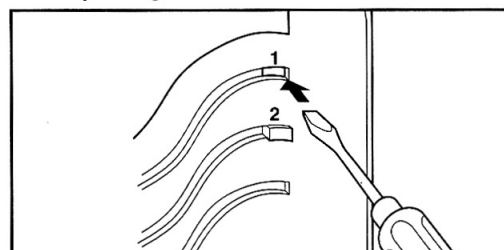

Press Switch 1 twice within 2 seconds to activate terminal output duration mode (zone indicators display the current setting).

TROUBLE SHOOTING

1. The system is not operating.

Check the transmitter.

| | | |
|--|---|--|
| Does the status indicator light up when you trigger the transmitter? | → | Check to see if the battery is inserted correctly. |
| | → | If the battery is old, replace it with a new one. |
| Is the status indicator of the transmitter flashing? | → | The battery is old. Replace the battery. |

Check the receiver.


| | | |
|---|---|---|
| Is the power indicator of the RC-10U lit? | → | Is the receiver on? Check the wiring and connection. |
| Have all the transmitter codes have been taught correctly? | → | Teach the transmitter codes correctly. The system will not operate without this process. |
| Is the volume setting correct? | → | Is the volume set to "0"? If so, readjust the volume. |
| Are there other high power appliances using the same electrical power outlet? | → | Please connect the RC-10U to a different electrical outlet. |
| The zone indicator of the RC-10U is on, but nothing happens. | → | Check to see whether the terminal is properly connected to other devices. |
| Is there anything blocking the transmission? | → | Relocate the RC-10U and/or the transmitter. Metal objects can shorten the effective transmission range. |
| Are zone indicators flashing slowly? | → | Follow directions in "LOW BATTERY INDICATION." |

2. The system is not operating correctly.

| | | |
|--|---|---|
| The RC-10U does not learn transmitter codes. | → | Check if the transmitter codes is not already "learned" in a different zone. If it is, erase memory and teach again. |
| The RC-10U gets reception in a wrong zone. | → | Erase memory in the zone the RC-10U responds and teach in the correct zone. |
| The RC-10U does not respond to some of the transmitters. | → | You may have taught multiple transmitter codes in a same zone. Teach the transmitter code that got no response using an empty zone. |
| Certain zone seems to malfunction. | → | It is probably the transmitter's problem. Check the transmitter that corresponds to that zone. |
| Before contacting the supplier! | → | Go through the setups again after Turning on the power while holding down the Switch 1. |


• If above solutions do not work, please contact your supplier for service.

LOW BATTERY INDICATION

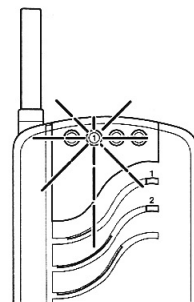

Zone indicators start flashing whenever corresponding transmitters have low battery. The receiver will sound chime followed by 2 beeps. Slow flashing of indicators will last until 1) batteries of the transmitter are replaced or 2) Switch 2 is pressed. In this case, replace transmitter batteries even if they are less than 2 years old. You can not activate various adjustment modes in this state, unless Switch 2 is pressed (indicators stop flashing). There is no need to go through adjustments again after replacing batteries.

DIMENSIONS

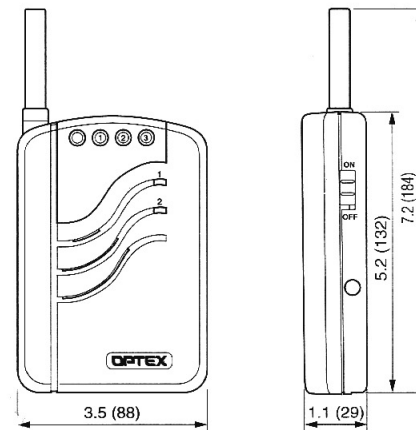

Unit: inches (mm)

SPECIFICATIONS

| Model | RC-10U |
|-----------------------|--|
| Description | Wireless Receiver |
| Power Source | DC 9V (Exclusive AC Adaptor) Standby: 1W Operating: 2W |
| Chime Tone | 3 Tone & Continue Zone (Selectable) |
| Volume | Adjustable: 0-80dB/ 5 levels Maximum Volume (Continue Zone) |
| Relay output | Form "C" MAX 1A/50VAC · DC24VAC |
| Output Timer | Selectable: Off/1/5/30/60sec/ Utility output mode |
| Status Indicator | Power Indicator: Green Zone Indicator: Red x 3 |
| Frequency | 418MHz |
| Operating Temperature | 15°F~104°F(-10°C ~+40°C) |
| Installation Location | Indoor |
| Weight | 6.0oz (170g) |
| Accessories | Mounting Screw x 1, AC Adaptor x 1 |

Specifications may change without notice

LIMITED TWO-YEAR WARRANTY

- (1) This Wireless Receiver is warranted to the original consumer purchaser to be free from defects in material and workmanship under normal use for two (2) years from the date of purchase. If the product proves to be defective, return it postage prepaid with a copy of your dated sales receipt for repairs or replacement at no charge.
- (2) This warranty is in lieu of any and all other warranties, expressed or implied, including but not limited to any warranty of merchantability or fitness for a particular purpose.
- (3) This warranty is invalid under following conditions
 - Mechanical or electrical modification(s) are performed to the product or it is otherwise altered manually.
 - Product is already been serviced at place(s) other than the manufacturer.
 - It is determined that product malfunction has resulted from improper use or from an accident.
 - A copy of dated sales receipt has not been submitted together with the product to be serviced.



OPTEX CO., LTD. (ISO 9001 Certified by LRQA)
4-7-5 Nionohama Otsu, 520-0801 Japan
TEL (077) 524-6047 FAX (077) 522-9022

OPTEX INCORPORATED
1845W. 205th Street Torrance, CA 90501-1510 U.S.A.
TEL (310) 533-1500 FAX (310) 533-5910

OPTEX (EUROPE) LTD. (ISO 9002 Certified by NQA)
Clivemont Road, Cordwallis Park, Maidenhead, Berkshire SL6 7BU U.K.
TEL (01628) 631000 FAX (01628) 636311